


## ICRP4PSP5490C@120V

Brand Name	OPTANIUM T5
Ballast Type	Electronic
Starting Method	Programmed Start
Lamp Connection	Parallel
Input Voltage	120-277
Input Frequency	50/60 HZ
Status	Active

### Electrical Specifications

Lamp Type	Num. of Lamps	Rated Lamp Watts	Min. Start Temp (°F/C)	Input Current (Amps)	Input Power (ANSI Watts)	Ballast Factor	MAX THD %	Power Factor	MAX Lamp Current Crest Factor	B.E.F
F54T5/HO	3	54	-20/-29	1.47	176	1.00	10	0.98	1.7	0.57
F54T5/HO	4	54	-20/-29	1.96	235	1.00	10	0.98	1.7	0.43
F54T5/HO/ES (49W)	3	49	-20/-29	1.35	162	1.00	10	0.98	1.7	0.62
* F54T5/HO/ES (49W)	4	49	-20/-29	1.79	214	1.00	10	0.98	1.7	0.47

### Wiring Diagram

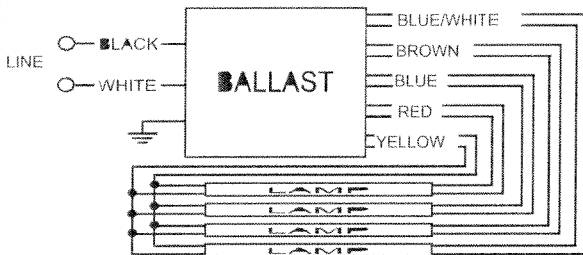


The wiring diagram that appears above is for the lamp type denoted by the asterisk (\*)

### Standard Lead Length (inches)

	in.	cm.		in.	cm.
Black	26	66	Yellow/Blue	56	142.2
White	26	66	Blue/White	25	63.5
Blue	28	71.1	Brown	25	63.5
Red	30	76.2	Orange		0
Yellow		0	Orange/Black		0
Gray	30	76.2	Black/White		0
Violet		0	Red/White		0

### Enclosure

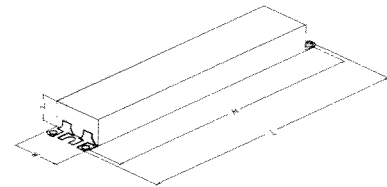

### Enclosure Dimensions

OverAll (L)	Width (W)	Height (H)	Mounting (M)
16.7 "	1.7 "	1.18 "	16.34 "
16 7/10	1 7/10	1 9/50	16 17/50
42.4 cm	4.3 cm	3 cm	41.5 cm

Revised 12/23/2010



Data is based upon tests performed by Philips Lighting Electronics N.A. in a controlled environment and is representative of relative performance. Actual performance can vary depending on operating conditions. Specifications are subject to change without notice. All specifications are nominal unless otherwise noted.

### PHILIPS LIGHTING ELECTRONICS N.A.

10275 WEST HIGGINS ROAD · ROSEMONT, IL 60018  
 Tel: 800-322-2086 · Fax: 888-423-1882 · www.philips.com/advance  
 Customer Support/Technical Service: 800-372-3331 · OEM Support: 866-915-5886