

Accessories — Field Installed

NEMA Non-Combination Contactors/Starters and Combination Contactors/Starters

Disconnect Switch Accessories, continued

For use on Bulletins 502, 502L, 506, 506X, 512, 512H, 512M, 512V, 522, 532, 542, 572, 1242, 1272, 1282, 1232X, and 1232V

1



Cat. No. 1494R-N3

Description		For Use With	Cat. No.
Lug Connectors (3 per package)			
Disconnect Size [A]	Wire Size	1494C, 1494F, 1494G, and 1494V Disconnect Switches	
30	#14...8 AWG Wire		*
60	#14...4 AWG Wire		§ 1494R-N1
100	#8...1/0 AWG Wire		§ 1494R-N2
200	#6...4/0 AWG Wire		§ 1494R-N3
400	#6...250 MCM AWG 16 mm ² ...120 mm ²		1494R-N14
400	#4 AWG...500 MCM Wire (oversized)		1494R-N15
600	(2) of #1/0...350 MCM Wire		§ 1494R-N10
600	(2) of #1/0...350 MCM Wire	1491-N621 or 1491-R621 600 A fuse blocks	♣ 1494R-N11



Protective Fuse Covers				
Switch Rating [A]	Fuse Class	Fuse Clip Rating [A]		Cat. No.
		250V	600V	
30	Non-fusible	—	—	1495-N64
30	H, R	30	—	
60	H, R	60	—	
30	J	30	30	
60	J	60	60	
60	Non-fusible	—	—	
100	Non-fusible	—	—	
30	H, R	—	30	1495-N65
60	H, R	—	60	
100	J	100	100	
100	H, R	100	100	1495-N66
	J	200	200	
200	Non-fusible	—	—	♢ 1495-N67
200	H, J, R	200	200	
	J	400	400	
200	Non-fusible	—	—	♢ 1495-N62
200	H, J, R	200	200	
400	Non-fusible	—	—	♢ 1495-N68
400	H, J, R	400	400	
400	Non-fusible	—	—	♢ 1495-N63
400	H, J, R	400	400	
600	Non-fusible	—	—	♢ 1495-N61
	J	600	600	

* All terminals of the 30 A switches are furnished with self-lifting pressure plate connectors (N56, N57, and N58) as standard.

§ Each kit contains three lugs.

♣ Each kits contains two lugs.

♢ Switch with right-hand mechanism.

♢ Switch with left-hand mechanism.



Protective Fuse Covers (for use with Bul. 1494C, 1494F, 1494G, and 1494V disconnect switches)					
Switch Rating [A]	Fuse Class	Fuse Clip Rating [A]		Cat. No.	
		250V	600V		
30	Non-fusible	—	—	1495-N64	
30	H, R	30	—		
60	H, R	60	—		
30	J	30	30		
60	J	60	60		
100	Non-fusible	—	—		
30	H, R	—	30	1495-N65	
60	H, R	—	60		
100	J	100	100		
100	H, R	100	100	1495-N66	
100	J	200	200		
200	Non-fusible	—	—	> 1495-N67	
200	H, J, R	200	200		
200	J	400	400		
200	Non-fusible	—	—	⌘ 1495-N62	
200	H, J, R	200	200		
400	Non-fusible	—	—	> 1495-N68	
400	H, J, R	400	400		
400	Non-fusible	—	—	⌘ 1495-N63	
400	H, J, R	400	400		
600	Non-fusible	—	—	> 1495-N61	
600	J	600	600		
600	H, J, R	600	600	+ 1495-N69	

Protective Line Covers (for use with Bul. 1494C, 1494F, 1494G, and 1494V disconnect switches)					
30, 60, 100	—	—	—	1495-N80	
200	—	—	—	1495-N81	
400	—	—	—	1495-N82	
600	—	—	—	1495-N83	

Terminal Lug Adapter Kit — allows two wires (maximum 8 AWG) to be installed on the line side or load side (for use with Bul. 1494C, 1494F, 1494G, and 1494V disconnect switches)					
30	—	—	—	1494R-N16	
60	—	—	—	1494R-N17	
100	—	—	—	1494R-N18	
200, 400	—	—	—	1494R-N19	

- > Switch with right-hand mechanism.
- ⌘ Switch with left-hand mechanism.
- + Used with Bulletin 1491-N621 and 1491-R621 on Bulletin 1494V/1494C/1494G.