

TRULUX™ Tunable CCT Controllers

For color temperature control at the turn of a dial, use our Trulux Tunable CCT controllers for fast and accurate adjustments from 2700K to 6000K. Transform the look and feel of a room with this dynamic, customizable system. (Trulux Tunable CCT controller and receiver required for operation)



TWRP-BATT

Tunable Push Dial Wall Control (Single Zone)

- Push dial On/Off control dimmer
- Double push dial for color temperature selection (2700K-6000K)
- Glass faceplate with satin nickel dial
- Wireless installation - No power wire
- Pair multiple receivers to a single control
- RF signal (up to 65 feet)
- Battery powered (CR2032)
- Requires Trulux receiver for install



TWRP-4Z

Tunable Touch Slide Wall Control (4 Zones / 2 Scenes)

- Touch On/Off control
- Touch slide control provides full range dimming and temperature selection (2700K-6000K)
- Glass faceplate with back-lit buttons
- 2 programmable scenes
- 4 dedicated zone selection
- Pair multiple receivers to a single control
- RF signal (up to 65 feet)
- Requires 12V-24V DC input power wire and Trulux receiver for install



TWRP-3AAA

Tunable CCT Remote (4 Zones / 3 Scenes)

- Ultra sensitive color adjustment wheel for 2700K-6000K selection
- 3 programmable scenes
- 4 dedicated zone selection
- 4 preset intensity settings
- Includes convenient wall caddy
- Pair multiple receivers to a single control
- RF signal (up to 65 feet)
- Battery powered (3 x AAA)
- Requires Trulux receiver for install

 


Trulux Tunable CCT Set-up



Push Dial Controller
(Single zone)

+



LED-DR 24V / 12V Driver
(30W, 60W, 100W, 150W)

+



Trulux RF Receiver
(Required)

+



Trulux Tape Light

TRULUX™ Tunable CCT Accessories

Building a Trulux system is easy! Our Trulux Tunable CCT controllers feature wireless technology that makes installation a breeze. All that's required is a 120V power source to a 12V power supply which is then fed to a Trulux receiver. Wire your tape to the receiver, sync the receiver to the controller, and you're all set.

TUNABLE SINGLE ZONE



Tunable Push Dial
Wireless RF Wall Controller

TWRF-BATT



- LED-DR 24V Drivers
LED-DR30-24 (30W)
LED-DR60-24 (60W)
LED-DR100-24 (100W)
LED-DR150-24 (150W)

- LED-DR 12V Drivers
LED-DR30-12 (30W)
LED-DR60-12 (60W)
LED-DR100-12 (100W)
LED-DR150-12 (150W)



Trulux RF Receiver
(Required per zone)
REC-5A-2Z

TUNABLE 4 ZONE



4 Zone Touch Slide
RF Wall Controller

TWRF-4Z



- LED-DR 24V Drivers
LED-DR30-24 (30W)
LED-DR60-24 (60W)
LED-DR100-24 (100W)
LED-DR150-24 (150W)

- LED-DR 12V Drivers
LED-DR30-12 (30W)
LED-DR60-12 (60W)
LED-DR100-12 (100W)
LED-DR150-12 (150W)



 
Trulux RF Receiver
(Required per zone)
REC-5A-4Z

TUNABLE 4 ZONE



Tunable Remote
RF Remote Control

TWRF-3AAA



- LED-DR 24V Drivers
LED-DR30-24 (30W)
LED-DR60-24 (60W)
LED-DR100-24 (100W)
LED-DR150-24 (150W)

- LED-DR 12V Drivers
LED-DR30-12 (30W)
LED-DR60-12 (60W)
LED-DR100-12 (100W)
LED-DR150-12 (150W)



Trulux RF Receiver
(Required per zone)
REC-5A-4Z

TRULUX APP MULTI ZONE



Trulux Mobile App
Mobile Phone / Tablet
(Control up to 8 rooms/zones)



- LED-DR 24V Drivers
LED-DR30-24 (30W)
LED-DR60-24 (60W)
LED-DR100-24 (100W)
LED-DR150-24 (150W)

- LED-DR 12V Drivers
LED-DR30-12 (30W)
LED-DR60-12 (60W)
LED-DR100-12 (100W)
LED-DR150-12 (150W)



Trulux TruHub
Wifi to RF Wireless Router
(Required for 2 - 8 zone installations)
WIFI-RF-8



Trulux RF Receiver
(Required per zone)
REC-5A-4Z

For more on Tunable Trulux controllers and receivers, see pages (60-61) for additional information

Trulux Tunable CCT Accessories



Power Feed Connector Kit
TL-4PWR



TL-4SPL Splice Connector
TL-4L (L) Snap connector
TL-4T (T) Snap connector
TL-4X (X) Snap connector



Linking Cables (IP54)
TL-4JUMP-5 (6")
TL-4JUMP-1 (12")
TL-4JUMP-2 (24")