

## Accessory Mounting Brackets

<p>SMBLT7</p>	<ul style="list-style-type: none"> <li>• Right-angle bracket</li> <li>• 300 series stainless steel</li> <li>• Fine-adjust accessory available (model SMBLT7F)</li> </ul>	<p>SMBLT7F</p>	<ul style="list-style-type: none"> <li>• Fine-adjust accessory for model SMBLT7 bracket; bracket sold separately</li> <li>• 304 series stainless steel</li> <li>• Mounting hardware included</li> </ul>

## Using the Bracket and Fine-Adjust Accessory

Bolt the two accessories to the base and/or angle of the bracket as shown in the photo above, aligning the small pins in the accessory with the small holes in the bracket. Install the sensor on the bracket, and the bracket on the mounting surface, using the bracket's curved slots for rough alignment. Tighten these bolts finger-tight. Tighten or loosen the SMBLT7F set screws to fine-adjust the sensor alignment in each axis; then tighten all bolts.