

WSR/WSRD DISCONNECT SWITCH
REPLACEMENT PARTS

ITEM	DESCRIPTION	USED ON	PART NO.
2	RECEPTACLE INTERLOCK RELEASE HANDLE	ALL UNITS	DBR K6 (M2 & M4)
	(Includes hardware)		
3	RECEPTACLE ASSEMBLY	WSR AND WSRD3351, 332, 3352	WBR331*
	(Includes housing, contacts, and wire leads)	WSR AND WSRD631, 6341, 6351, 63541	WBR631*
		WSR AND WSRD1031, 10351, 10341, 103541	WBR1031*
		WSR AND WSRD332, 3352, 3342, AND 33542	WBR3442*
		WSR AND WSRD632, 6352, 6342, AND 63542	WBR6442*
		WSR AND WSRD1032, 10352, 10342, AND 103542	WBR10442*
		WSR AND WSRD33541	WBR3341*
		WSR AND WSRD63541	WBR6341*
		WSR AND WSRD10341	WBR10341*
4	REPLACEMENT SWITCH AND FUSE BLOCK	WSR ONLY	BUY LOCALLY
5	SWITCH HANDLE	WSR ONLY	EBM:0206550-1
6	SWITCH HANDLE LOCKOUT PLATE	ALL UNITS	EBM-K5
7	RECEPTACLE ADAPTER BOX	ALL UNITS	WSR:0200084-1
8	RECEPACLE ADAPTER BOX GASKET	ALL UNITS	WSR:0200086-2
9	MOUNTING FEET ASSEMBLY KIT	30 & 60 AMP	WSR MF K1
	(Includes 2 upper and 2 lower mounting feet and screws)	100 AMP	WSR MF K2
* For interior assembly only—attach the suffix "R1" to catalog number. For example: WBR331R1			