

Accessories

Auxiliary Contacts

Side-Mount Auxiliary Contacts



Can be fitted on the right side of manual motor protectors (XTPB, XTPR, XTPM) and manual transformer protectors (XTPT) and can be combined with XTPAXSATR... and XTPAXFA... trip indicating auxiliary contact.

Table 34-183. Side-Mount Auxiliary Contacts

Contact Configuration	Contact Sequence	Screw Terminals		Spring Cage Terminals		Price U.S. \$ ①
		Pkg. Qty.	Catalog Number	Pkg. Qty.	Catalog Number	
1NO-1NC	 XTPAXSA11	5	XTPAXSA11	5	XTPAXSAC11	
1NO-2NC	 XTPAXSA12	5	XTPAXSA12	—	—	
2NO-1NC	 XTPAXSA21	5	XTPAXSA21	—	—	

① Orders must be placed in multiples of package quantity listed.

Front-Mount Auxiliary Contacts



Can be fitted to manual motor protectors (XTPB, XTPR, XTPM) and manual transformer protectors (XTPT). 45 mm (XTPR...B and XTPB) or 55 mm (XTPR...D) widths of manual motor protectors remain unchanged.

Table 34-184. Front-Mount Auxiliary Contacts

Contact Configuration	Contact Sequence	Screw Terminals		Spring Cage Terminals		Price U.S. \$ ②
		Pkg. Qty.	Catalog Number	Pkg. Qty.	Catalog Number	
1NO-1NC	 XTPAXFA11	5	XTPAXFA11	—	—	
1NO-0NC	 XTPAXFA10	5	XTPAXFA10	5	XTPAXFAC10	
0NO-1NC	 XTPAXFAC01	—	—	5	XTPAXFAC01	

② Orders must be placed in multiples of package quantity listed.

Discount Symbol **1CD7**