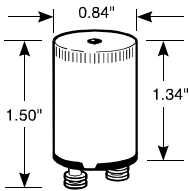 
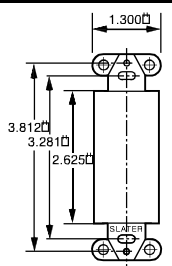 
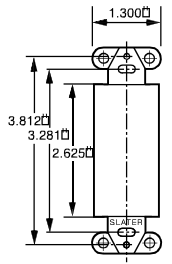 
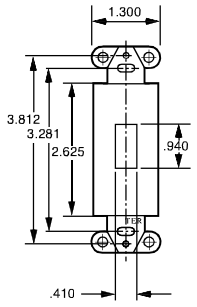 
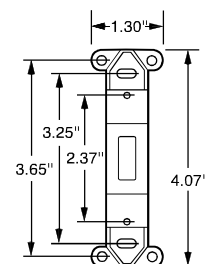 


Electrical Accessories Fluorescent Starters & Wall Plate Inserts

| Fluorescent Starters | | | | |
|---|---|--|-----------------------|--|
| | Catalog Number | Description | UL | CSA |
|  <p>FS2 FS4 FS5 FS25</p> | FS2 | Glow switch starter without reset, 2 pins 14, 15 & 20W. | • | • |
| | FS4 | Glow switch starter without reset, 2 pins 13, 30 & 40W. | • | • |
| | FS5 | Glow switch starter without reset, 2 pins 4, 6 & 8W. | • | • |
| | FS25 | Glow switch starter without reset, 2 pins 22W Circline 25W Std. | • | • |
| Wall Plate Inserts | | | | |
| Dimensions | Catalog Number | Description | Finish | Color |
|  | 325I 325W 325 325BK 325LA 325GRY | Mounting strap for blank insert. Box mounted. Changes decorator opening to blank. | Polycarbonate Plastic | Ivory White Brown Black Light Almond Grey |
|  | 326I 326W 326 326LA | Mounting strap for blank insert. Box mounted. Changes decorator opening to blank. | Painted Steel | Ivory White Brown Light Almond |
|  | 327I 327W 327 327LA | Mounting strap for dimmer insert. Box mounted. Change from decorator to toggle opening. | Painted Steel | Ivory White Brown Light Almond |
|  | 80700I 80700W 80700LA | Mounting strap for blank insert. Box mounted. Changes toggle opening to blank. | Thermoset Plastic | Ivory White Light Almond |