

# Parts & Accessories



## Pullers, Fuse Blocks, Fuse Holders



**Model Number**  
**Wire Range (CuAl)**  
**Amp (Maximum)**


**FH1**  
14-10 Cu Only  
30




**FH2**  
14-10 Cu Only  
20



**FH3**  
14-10 Cu Only  
30

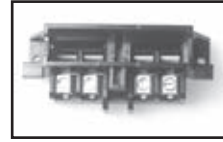

**NF65**  
14-3  
60

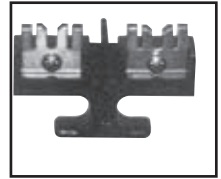

**NF652**  
(Pullout For NF65)



**Model Number**  
**Wire Range (CuAl)**  
**Amp (Maximum)**


**FH101**  
12-1/0  
100



**FHL101**  
12-1/0  
100




**FH1012**  
(Pullout for FH101  
and FHL101)

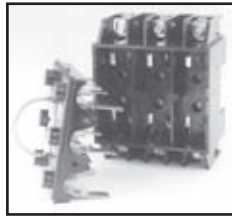


**Model Number**  
**Wire Range (CuAl)**  
**Amp (Maximum)**


**265A6036G69**    **265A6035G27**  
60                      30

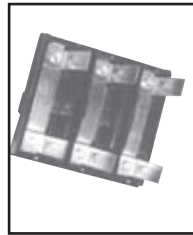


**265A6036G72**  
(Pullout for  
U0653P)

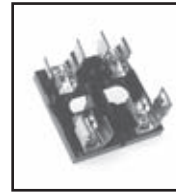

**FR352**  
(Pullout for P035F,  
FR35, FR39)

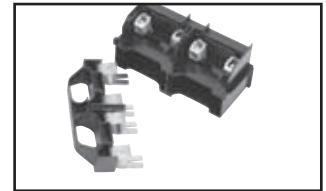

**FR35R**  
FR35R (Fuse Block and Pullout  
for U035F2)  
FR352R (Pullout for U035F2,  
FR35R)

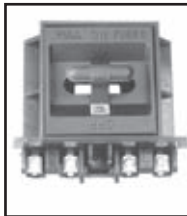


**Model Number**  
**Wire Range (CuAl)**  
**Amp (Maximum)**

**FR35**    **FR65**  
12-3    12-3  
30      60




**FR66**  
12-3  
60

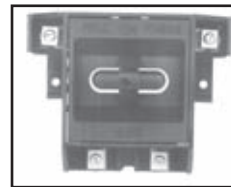

**FR39**    **FR69**  
12-3    12-3  
30      60




**FR682**  
(Pullout for FR67, FR65, FR66,  
FR69, FR64X2, FR65X2,  
FR67X2)

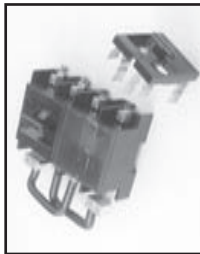

**Model Number**  
**Wire Range (CuAl)**  
**Amp (Maximum)**


**FR64X2**  
12-3  
60

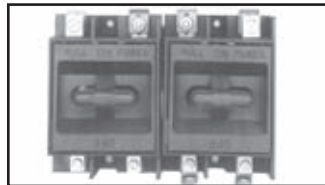

**FR65X2**  
12-3  
60



**FR67**  
12-3  
60

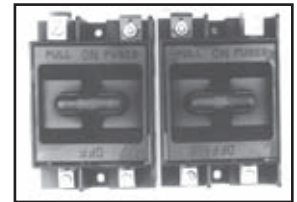

**FR67X2**  
12-1/0  
100