


PHILIPS ADVANCE

Electrical Specifications

ICN-2P60-SC @ 120V	
Brand Name	CENTIUM
Ballast Type	Electronic
Starting Method	Instant Start
Lamp Connection	Parallel
Input Voltage	120-277
Input Frequency	50/60 HZ
Status	Active

Lamp Type	Num. of Lamps	Rated Lamp Watts	Min. Start Temp (°F/°C)	Input Current (Amps)	Input Power (ANSI Watts)	Ballast Factor	MAX THD %	Power Factor	MAX Lamp Current Crest Factor	B.E.F.
F72T12	1	57	0/-18	0.70	68	1.05	10	0.98	1.7	1.54
F72T12	2	57	0/-18	0.91	108	0.92	10	0.98	1.6	0.85
F96T12	1	75	0/-18	0.55	84	1.04	10	0.98	1.7	1.24
* F96T12	2	75	0/-18	1.13	135	0.88	10	0.99	1.6	0.65
F96T12/ES	1	60	60/16	0.53	70	1.04	10	0.98	1.7	1.49
F96T12/ES	2	60	60/16	0.90	108	0.87	10	0.99	1.6	0.81

Wiring Diagram

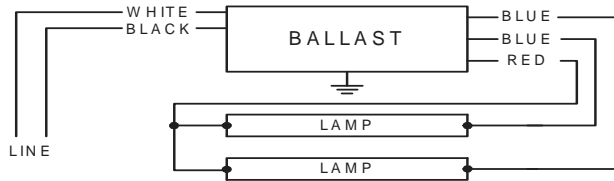


Diag. 64 -A

The wiring diagram that appears above is for the lamp type denoted by the asterisk (*)

Standard Lead Length (inches)

	in.	cm.		in.	cm.
Black	25	63.5	Yellow/Blue		0
White	25	63.5	Blue/White		0
Blue	46	116.8	Brown		0
Red	79	200.7	Orange		0
Yellow		0	Orange/Black		0
Gray		0	Black/White		0
Violet		0	Red/White		0

Enclosure

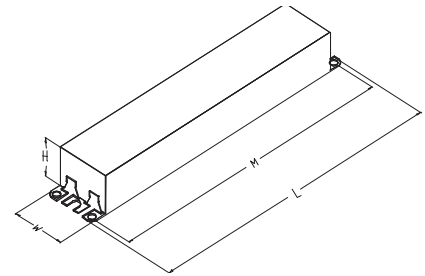

Enclosure Dimensions

OverAll (L)	Width (W)	Height (H)	Mounting (M)
9.50 "	1.7 "	1.18 "	8.90 "
24.1 cm	4.3 cm	3 cm	22.6 cm



Revised 02/28/14

Data is based upon tests performed by Philips Lighting N.A in a controlled environment and representative of relative performance. Actual performance can vary depending on operating conditions. Specifications are subject to change without notice. All specifications are nominal unless otherwise noted.

Philips Lighting Electronic N.A

10275 West Higgins Road Rosemont, IL 60018 Tel.: 800-322-2086 Fax: 888-432-1882
Customer Support/Technical Service: 800-372-3331 · OEM Support: 866-915-5886