


User's Guide For

SOG

Twitch I, TWITCH II, & Twitch XL

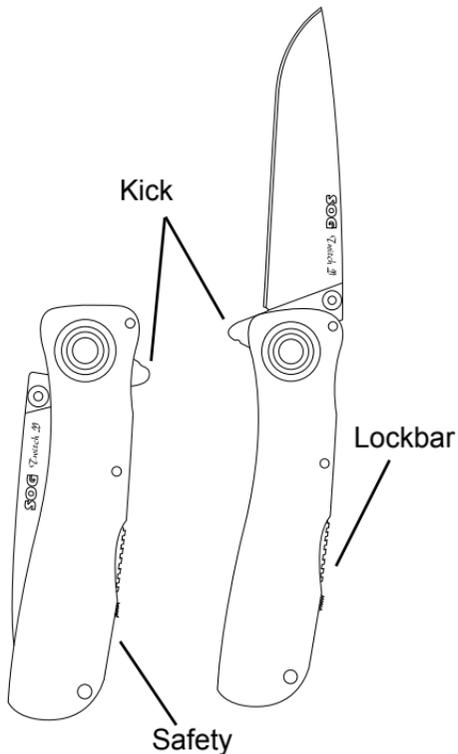


Congratulations on becoming a SOG Twitch owner. You have chosen a truly innovative product with S.A.T.[™] (SOG Assisted Technology). Once you start to open the knife, a spring helps to fully open the blade. Please read this short manual to learn how to properly operate the Twitch series of knives.

Twitch Fact:

Unlike switchblades, which are activated by a button-like mechanism in the handle or with the use of gravity, S.A.T.[™] only works when you start to manually open the blade out of the handle. When the blade is closed, it is held securely within the handle.

Instructions

1. When opening the blade, make sure the safety is in the unlocked position. To unlock the safety, slide the lock towards the back end of the handle. To lock the safety, slide the lock to the forward position (towards the locking bar).

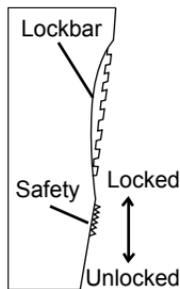

2. The Twitch features SOG's innovative pass-through lockbar, which allows the "kick" of the blade to stick through (see diagram). To open the blade, simply push on the "kick" of the blade and S.A.T.[™] will take over. It might take a little practice to get comfortable with the grasping and opening of your new knife.

Note: If the blade is not opening fully, you might be blocking the opening blade with one of your other fingers.

NOTE: FOR YOUR SAFETY, IT IS IMPORTANT THAT YOU KEEP YOUR OTHER HAND AWAY FROM THE BLADE WHILE OPENING.

3. To close the blade on the Twitch, push on the lockbar and rotate the blade closed with two hands (although with practice you may be able to close it with one hand). The blade is now held securely inside the handle. To lock the blade closed, just slide the safety into the locked position (see diagram).

NOTE: ALWAYS BE SURE TO KEEP YOUR FINGERS CLEAR WHEN CLOSING ANY KNIFE BLADE.

The pocket clip on the Twitch XL is reversible, the Twitch I and Twitch II are not reversible. To switch the clip use a 5/64" hex drive to remove the screw that secures the clip in the handle. Remove the clip and rotate 180° to the opposite side. Reinsert the screw and tighten.

Use this product safely and according to your local municipal, state, and federal laws.

Warranty

The Twitch is guaranteed against defects in workmanship and materials for the life of the original purchaser. This warranty is voided by misuse, abuse, disassembly, improper maintenance, or alterations of the product and does not cover normal wear that may occur. All warranty claims should be directed to the factory and SOG reserves the right to the repair or replacement of the product at SOG's discretion.