

Model # 41160S

# VOLTAGE/CONTINUITY TESTER

Simple to use tester automatically indicates polarity and live AC and DC voltage up to 600 volts in 7 steps.



**QUICK CONTINUITY READING**

Check continuity of wires, light bulbs and fuses

**AUTOMATIC SELECTION**

AC, DC, or Continuity

**BATTERY SAVER**

Automatically turns on and off

**EASY TO READ DISPLAY**

Indicates polarity and seven levels of AC/DC voltage

**3 FUNCTIONS**

- AC Voltage
- DC Voltage
- Continuity



[southwiretools.com](http://southwiretools.com)

BUILT FOR DURABILITY. BUILT FOR RELIABILITY.  
**BUILT FOR WORK.**



**Southwire™**

## FEATURES

- Check continuity of wires, light bulbs and fuses
- Automatic selection: AC, DC, or continuity
- Indicates polarity and seven levels of AC/DC voltage
- Automatically turns on and off
- UL listed, CAT III 600V
- AA batteries included

## INCLUDES

- 41160S Tester with integrated test leads
- Two AA batteries

## SPECIFICATIONS

VOLTAGE/ CONTINUITY ELECTRICAL TESTER 600V (41160S)	
AC Voltage Indication:	24, 120, 208, 240, 277, 480, 600V
DC Voltage Indication:	6, 12, 24, 36, 48, 110, 220V
Tolerances:	-30% to 0% of indication
AC Operating Frequency:	50/60Hz
Continuity Test:	beeper will sound if the resistance is under 85k $\Omega$
Maximum Input:	600V AC/DC
Dimensions:	5.32 x 2.03 x 1.52 in.
Weight:	405g



**Southwire Company**  
One Southwire Drive  
Carrollton, GA 30119



**Southwire™**



**Customer Service: 1-855-SWTOOLS (855-798-6657)**

Scan code to see more  
Southwire Tools  
[southwiretools.com](http://southwiretools.com)