



CS2 & CS20SC Cable Supports

Supports up to four 14/2 - 10/2 flat (any combination) and two 14/3 - 10/3 (any combination) NM cables.




CS2, CS20



#8 self-tapping sheet metal screw
CS20SC

CATALOG NUMBER	UPC/DCI/NAED MFG #018997	UNIT PKG	STD PKG	DIM A	DIM B	DIM C
CS2	71002	500	500	2.650	2.530	.500
CS20	71020	100	100	2.650	2.530	.500
CS20SC	71025	100	100	2.704	2.563	.500
CS20BAG	71022	25	100	2.650	2.530	.500

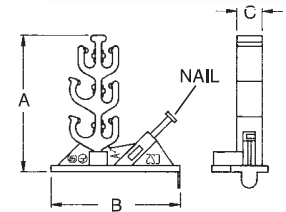

Installation Instructions

To install the CS2:

Position the CS2 in the desired location on a wood stud and drive in nail. Insert cable or cables.

CS2 on Wood Stud



CS20SC on Metal Stud



To install the CS20SC:

Position the CS20SC in the desired location on a wood or metal stud and tighten self-tapping screw. Insert cable or cables.

The Spacer™ Cable Spacer

New!

Non-metallic cable spacer that holds power or low voltage cables secure and centered on a 2x4.



CS14

CATALOG NUMBER	UPC/DCI/NAED MFG #018997	DESCRIPTION	UNIT PKG	STD PKG	DIM A	DIM B	DIM C
CS14	33827	Nail on Cable Spacer	25	250	.633	3.296	1.920
CS140	33829	Nail on Cable Spacer	500	500	.633	3.296	1.920
CS140SC	01574	Screw on Cable Spacer	500	500	.633	3.296	1.920
CS14SC	01573	Screw on Cable Spacer	25	250	.633	3.296	1.920

