


ADAPTING MOLDS TO FIT CONDUCTORS

Cables smaller than indicated on mold tag can be welded by using either wrap sleeves or adapter sleeves.

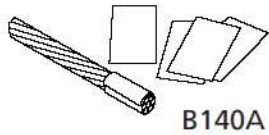


CADWELD Wrap Sleeve B140A

CADWELD Wrap Sleeve is wrapped around the cable until the diameter is about the same as the cable opening in the mold.


CADWELD Adapter Sleeves

CADWELD Adapter Sleeves are used to adapt a limited range of smaller size cables to a larger size CADWELD Mold.

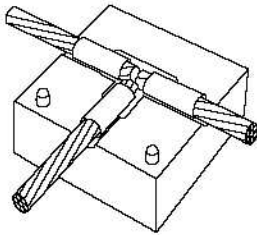

CABLE SIZE		Adapter Sleeve Part No.	Use in Mold for Stranded
Concentric Strand	Solid		
#12,14	#10,12,14	B133-1H	#6
#7,8,10	#6,8	B133-1L	#4
#6	#5	B112	#2
#4,5	#3,4	B133-1V	#2
#3,4	#2	B133-1Y	#1
#2	#1	B133-2C	1/0
#1	1/0	B133-2G	2/0
1/0,1	2/0	B133-2L	3/0
2/0,1/0	3/0	B133-2Q	4/0

CADWELD Sleeve Kit (T427)

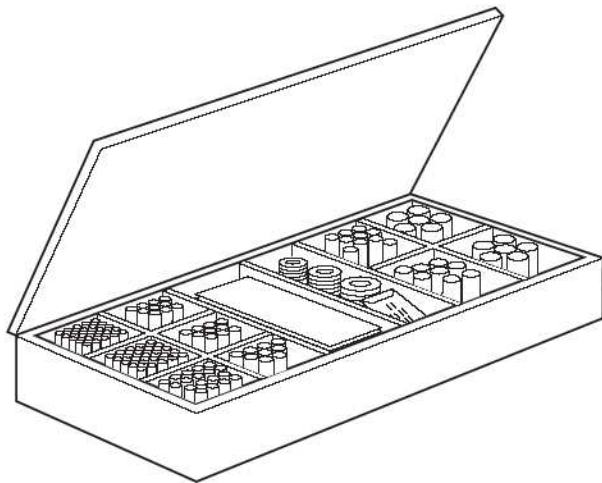

T427 Includes:	
Part No.	Quantity
B1331H	25
B1331L	25
B112	18
B1331V	10
B1331Y	10
B1332C	9
B1332G	10
B1332L	8
B1332Q	12
B140A	10
B117A	20
B117B	10
B117C	10
T320A	10