




Electrical Specifications

IZT-2S26-M5-BS@120	
Brand Name	MARK 7 0-10V
Ballast Type	Electronic Dimming
Starting Method	Programmed Start
Lamp Connection	Series
Input Voltage	120-277
Input Frequency	50/60 HZ
Status	Active

Lamp Type	Num. of Lamps	Rated Lamp Watts	Min. Start Temp (°F/C)	Input Current (Amps)	Input Power (Watts) (min/max)	Ballast Factor (min/max)	MAX THD %	Power Factor	Lamp Current Crest Factor	B.E.F.
CFQ13W/G24Q	1	13	50/10	0.15	06/18	0.03/1.00	10	0.99	1.6	5.56
CFQ13W/G24Q	2	13	50/10	0.28	19/34	0.03/1.00	10	0.99	1.6	2.94
CFQ18W/G24Q	1	18	50/10	0.19	07/23	0.03/1.00	10	0.99	1.6	4.35
CFQ18W/G24Q	2	18	50/10	0.34	11/41	0.03/1.00	10	0.99	1.6	2.44
CFQ26W/G24Q	1	26	50/10	0.25	08/30	0.03/1.00	10	0.99	1.6	3.33
* CFQ26W/G24Q	2	26	50/10	0.46	13/55	0.03/1.00	10	0.99	1.6	1.82
CFTR13W/GX24Q	1	13	50/10	0.15	06/18	0.03/1.00	10	0.99	1.6	5.56
CFTR13W/GX24Q	2	13	50/10	0.28	19/33	0.03/1.00	10	0.99	1.6	3.03
CFTR18W/GX24Q	1	18	50/10	0.19	07/23	0.03/1.00	10	0.99	1.6	4.35
CFTR18W/GX24Q	2	18	50/10	0.34	11/41	0.03/1.00	10	0.99	1.6	2.44
CFTR26W/GX24Q	1	26	50/10	0.25	06/30	0.03/1.00	10	0.99	1.6	3.33
CFTR26W/GX24Q	2	26	50/10	0.46	11/55	0.03/1.00	10	0.99	1.6	1.82
CFTR32W/GX24Q	1	32	50/10	0.30	09/36	0.03/1.00	10	0.99	1.6	2.78
CFTR42W/GX24Q	1	42	50/10	0.39	09/47	0.03/1.00	10	0.99	1.6	2.13

Wiring Diagram

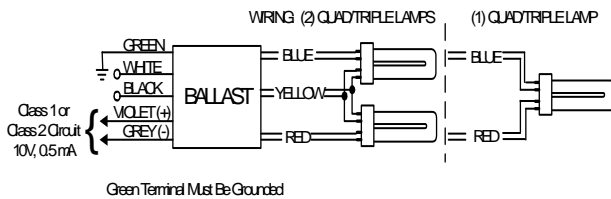


Diag 166

The wiring diagram that appears above is for the lamp type denoted by the asterisk (*)

Standard Lead Length (inches)

	in.	cm.		in.	cm.
Black	0	0	Yellow/Blue		0
White	0	0	Blue/White		0
Blue	0	0	Brown		0
Red	0	0	Orange		0
Yellow	0	0	Orange/Black		0
Gray		0	Black/White		0
Violet		0	Red/White		0

Enclosure

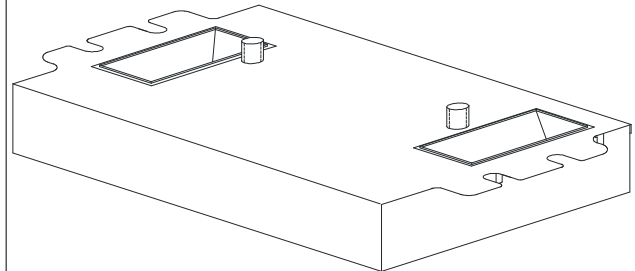

Enclosure Dimensions

OverAll (L)	Width (W)	Height (H)	Mounting (M)
4.98 "	3.00 "	1.18 "	2.00 "
4 49/50	3	1 9/50	2
12.6 cm	7.6 cm	3 cm	5.1 cm



Revised 10/23/07

Data is based upon tests performed by Advance Transformer in a controlled environment and representative of relative performance. Actual performance can vary depending on operating conditions. Specifications are subject to change without notice. All specifications are nominal unless otherwise noted.

ADVANCE TRANSFORMER CO.

O'HARE INTERNATIONAL CENTER · 10275 WEST HIGGINS ROAD · ROSEMONT, IL 60018

Customer Support/Technical Service: Phone: 800-372-3331 · Fax: 847-768-7768

Corporate Offices: Phone: 800-322-2086