

Power Cables

Catalog Number 2090-CPBM6DF-16AAxx,
 2090-CPWM6DF-16AAxx, 2090-DANPT-16Sxx,
 2090-XXNPH-16Sxx, 2090-XXNPHF-14Sxx, 2090-MCNPMP-6Sxx,
 2090-XXNPMP-8Sxx, 2090-XXNPMF-10Sxx,
 2090-XXNPMF-14Sxx, 2090-XXNPMF-16Sxx, 2090-XXNPN-16Sxx,
 2090-XXNPT-16Sxx, 2090-XXNPY-16Sxx

Topic	Page
Before You Begin	1
Cable Installation Guidelines	2
Schematics and Connector Pinouts for Power Cables	3
2090-CPBM6DF-16AAxx	3
2090-CPWM6DF-16AAxx	4
2090-DANPT-16Sxx	4
2090-MCNPMP-6Sxx, 2090-XXNPMP-8Sxx, 2090-XXNPH-16Sxx, 2090-XXNPHF-14Sxx	5
2090-XXNPMF-10Sxx	5
2090-XXNPMF-14Sxx, 2090-XXNPMF-16Sxx	6
2090-XXNPMP-10Sxx, 2090-XXNPMP-14Sxx, 2090-XXNPMP-16Sxx	6
2090-XXNPN-16Sxx	7
2090-XXNPT-16Sxx	7
2090-XXNPY-16Sxx	7

About This Publication

This publication provides cable schematics with wire color and connector pinouts for power cables used with Kinetix Motion Control products.

Before You Begin

The Kinetix Motion Control Selection Guide, publication GMC-SG001, contains information on cable compatibility with specific drives and motors. It also provides information on the bend offset and bend radius for each cable. Refer to your drive manual for instructions to correctly interface the cables in this document to your drive and motor combination.

These publications are available from your local Rockwell Automation sales office or online at <http://www.literature.rockwellautomation.com>).

Cable Installation Guidelines

Cables are stored and shipped in a coil, and they will retain this shape unless you allow the cable to straighten itself. To straighten a cable, hang a short cable from its mid-point or lay a long cable on the floor in a straight line. Any coiling that persists in the cable should relax within the next twenty-four hours. Doing this results in a cable that is easier to install.

WARNING

To avoid the hazard of electrical shock, ensure shielded power cables are grounded at a minimum of one point. Factory supplied cables have the following design features that prevent the build-up of electrical energy.

- the overall braid bonded to the connector housing,
- an exposed section of the overall braid, or
- a ground wire connected to the overall braid.

If the exposed cable braid or a ground wire is present, it should be connected to the power cable clamp, housing, or another suitable chassis ground on the drive.

Failure to observe these safety procedures could result in personal injury or equipment damage.

WARNING

Servo drive power must be turned off before connecting or disconnecting the cables to the motor, and if a cable is left disconnected at the motor end. Arcing or unexpected motion could occur if the brake, feedback, or power cables are connected or disconnected while power is applied to the servo drive.

Failure to observe these safety procedures could result in personal injury or damage to the motor and equipment.

ATTENTION

The examples in this publication show all the available connections, some of which may not be appropriate for your specific installation. Refer to your drive installation or user manual for wiring examples appropriate to your drive and motor application.

Do not connect unused wires. These unused wires may be trimmed and finished as necessary to prevent accidental contact with other wires or wire shields, or with a ground connection.

Failure to observe these safety procedures could result in personal injury or damage to the motor and equipment.

ATTENTION



Do not tightly gather or coil the excess length of a power cable. Heat is generated within a cable whenever power is applied. Always position a power cable so it may freely dissipate any heat.

A power cable should not be coiled, except for temporary use when building or testing a machine. If you temporarily coil a power cable, you must also derate the cable to meet local code or follow a authoritative directive, such as Engineering Section 310.15(C) of the NEC Handbook.

Failure to observe these safety procedures could result in personal injury or equipment damage.

Before bending a cable, verify that the correct offset from the connector is provided. This offset should be equal to or greater than one times (1x) the cable diameter.

All cables have a specified bend radius, and cables should not be bent with a radius that is tighter than the specified bend radius.


- Cables have a static or one-time bend radius of ten times (10x) the cable diameter.
- Flex cables have an operational bend radius of twelve times (12x) the cable diameter.

You may identify the connections for a cable by attaching a label around the outer insulation of each wire adjacent to the drive connection.


Schematics and Connector Pinouts for Power Cables

These diagrams detail cable wiring and pinouts.


2090-CPBM6DF-16AAxx

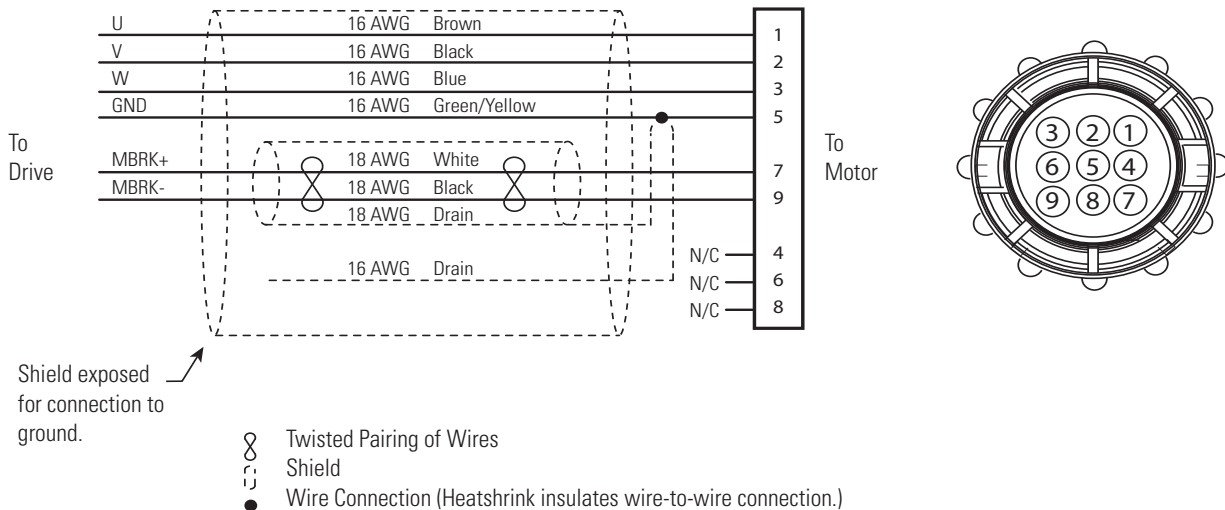

2090-CPWM6DF-16AAxx

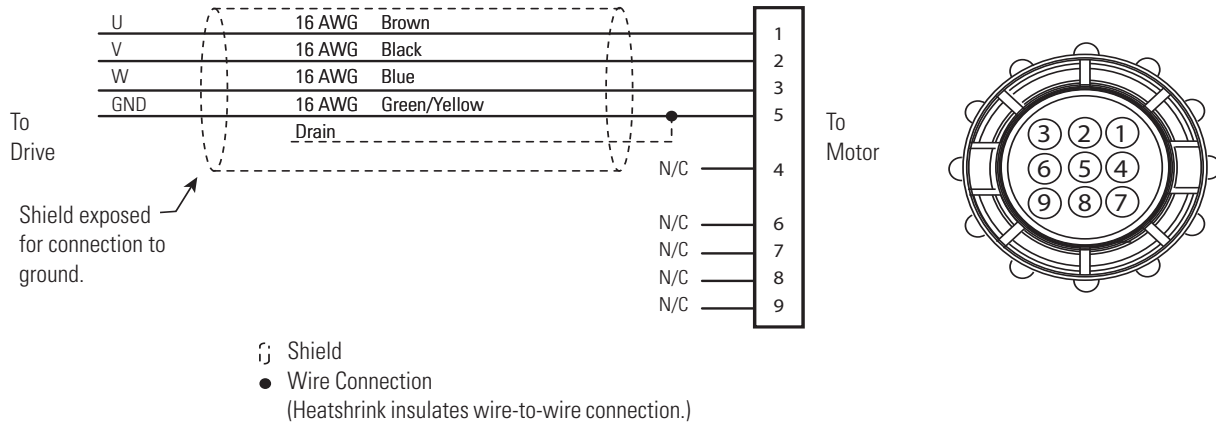

2090-DANPT-16Sxx

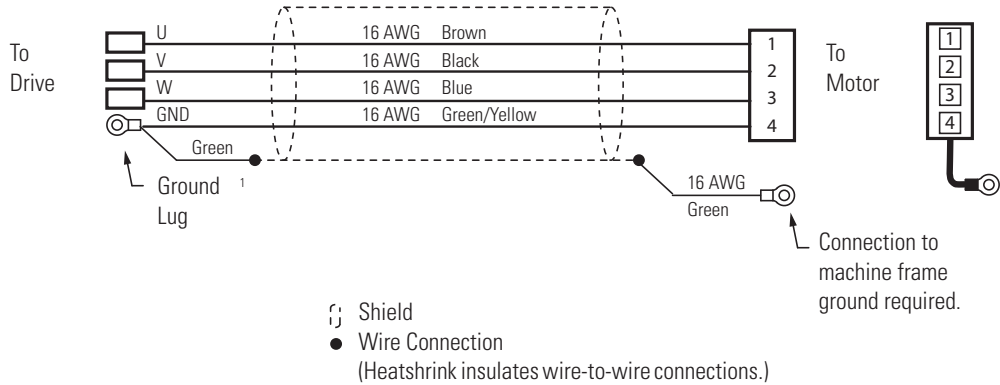

1 Ground lug is located on the heatsink of on the Ultra 1500 drive. Do NOT connect this wire to the N Terminal (DC Bus Neg) on the Ultra 1500 drive.